Other Popular Request-to-Exit Plates

SD-7275SGEX1Q

SD-7202GC-PE



- Illuminated vandal resistant
- 1"(25mm) diameter pushbutton N.O./N.C. contact rated
- 5A @ 250 VAC.
- Field selectable green/red color LED light.
- "EXIT" and "SALIDA" silk-screened on plate.

Note: The SD-7202GC-PE is also available with timer.



- 2" square green, illuminated, momentary push button.
- N.O./N.C. contact rated
- 10A @ 125 ~ 250 VAC. Includes: "PUSH TO EXIT" & "PRESIONE PARA SALIR"
- button faces.
- No Touch Request-To-Exit Plate.

EXIT

SD-927PKC-NEQ

NO TOUCH

- Range up to 4" (10cm).
- 3A relay, triggers min. 0.5 sec. or as long as hand is near the sensor.
- Green LED-illuminated sensor area for easy identification. LED turns red to show the relay is triggered.
- Quick connect screwless terminal block

WARNING: Incorrect mounting which leads to exposure to rain or moisture inside the enclosure could cause a dangerous electric shock, damage the device, and void the warranty. Do not open the case of this device, as there are no field-serviceable components inside.

WARRANTY: This SECO-LARM product is warranted against defects in material and workmanship while used in normal service for a period of one (1) year from the date of sale to the original consumer customer. SECO-LARM's obligation is limited to the repair or replacement of any defective part if the unit is returned, transportation prepaid, to SECO-LARM. This Warranty is void if damage is caused by or attributed to acts of God, physical or electrical misuse or abuse, neglect, repair, or alteration, improper or abnormal usage, or faulty installation, or if for any other reason SECO-LARM determines that such equipment is not operating properly as a result of causes other than defects in material and workmanship. The sole obligation of SECO-LARM, and the purchaser's exclusive remedy, shall be limited to replacement or repair only, at SECO-LARM's option. In no event shall SECO-LARM be liable for any special, collateral, incidental, or consequential personal or property damages of any kind to the purchaser or anyone else.

NOTICE: The information and specifications printed in this manual are current at the time of publication. However, the SECO-LARM policy is one of continual development and improvement. For this reason, SECO-LARM reserves the right to change specifications without notice. SECO-LARM is also not responsible for misprints or typographical errors. Copyright © 2007 SECO-LARM U.S.A., Inc. All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of SECO-LARM.

SECO-LARM® U.S.A., Inc.

FILE: DT/DTP/MiSD7251GCEX1Q.pmd ORDER PART# 763-159%

16842 Millikan Avenue, Irvine, CA 92606 Tel: 800-662-0800 / 949-261-2999 Fax: 949-261-7326

PITSW1 Website: www.seco-larm.com E-mail: sales@seco-larm.com

SECO-LARM U.S.A., Inc.

Installation Manual

ENFORCER[®] SD-7251 GCEX1 0

Illuminated Mushroom-cap Push-to-Exit Plate

Features:

- Illuminated green 1¹/₂" (40mm) dia. mushroon-cap button.
- N.O./N.C. contact rated at 5A@125VAC.
- "EXIT" and "SALIDA" silk-screen on plate.
- Green illuminated pushbutton for easy identification.

Installation:

- 1. Run four wires through the wall to the back-box.
- 2. Connect 2 wires (12VDC) to the illumination terminals.
- a) The illumination terminals are non-polarity.
- a) For 24VDC operation, install supplied resistor (1K Ω , 1/4 Watt) in line on the + illumination wire.
- 3. Connect 2 wires to either the N.C. (red color terminal) or N.O.(blue color terminal) as required.
- 4. Screw plate to the back-box, using caution not to pinch any wires.

Bulb replacement:

Fig. 1 – Bulb replacement

- 1. If the LED bulb needs to be replaced, removed the yellow lever cover as shown on Fig.1 by pulling it upward.
- 2. Move the lock lever counterclockwise as shown then pull off the back portion (terminals) of the switch to expose the LED bulb.
- 3. Replace only with the same specification bulb. Using wrong specification bulb will risk burning out the bulb and pushbutton switch. Contact SECO-LARM for replacement bulb.
- 4. Put back the yellow lever cover after LED bulb has been replaced.

Yellow lever cover

Connections:





