

Instructions for Radio Control Operator Dual and Triple Entry Transmitter

Read the following instructions thoroughly before using transmitter.

This transmitter must be adjusted so that the coding switches match the coding switches on your present operating transmitters or receiver.

FCC Regulation: this device complies with FCC Rules Part 15. Operation is subject to the following two conditions: 1) This device may not cause harmful interference. 2) This device must accept an interference that may cause an undesired operation. Transmitter distance may vary due to circumstances beyond our control.

TO PROGRAM FOR USE WITH THE GATE OPENER:

1. Remove the Transmitter Cover

 
 
Remove the access cover from the front of the transmitter by sliding the cover away from the top of the transmitter. This will expose the battery and the dipswitches. The code can now be changed using a small screwdriver.

2. Setting The Codes

There are eight (8) dip switches, each of which can be placed in three different positions (+,0,-). DO NOT set all switches in the same position, such as all +, all -, or all zero (Figure B). WARNING: No other adjustments should be made inside the transmitter.

Make note of the button you chose, as this will be the button you must now use to operate your gate.

To activate, simply depress your transmitter button until the gate begins to move. If you have more than one gate operator, repeat #3, Commit the code to Memory in Control Board as needed. Be sure to select a different transmitter button to use with each operator.

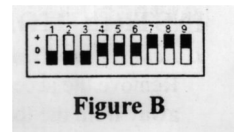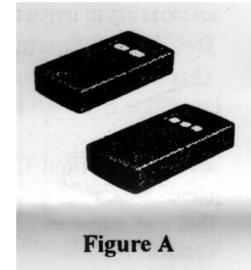

TO PROGRAM FOR USE WITH A GARAGE DOOR RECEIVER:

1. Remove the Transmitter Cover

Remove the access cover from the front of the transmitter by sliding the cover away from the top of the transmitter. This will expose the battery and the dipswitches. The code can be changed using a small screwdriver.

 
 
2. Remove the Garage Door Receiver Cover

Use a small screwdriver or knife to remove small door on back of receiver to gain access to coding switches.

3. Setting the Code


In the transmitter there are eight (8) dip switches, each of which can be placed in three different positions (+,0,-). DO NOT set all switches in the same position, such as all +, all -, or all zero.

WARNING: No other adjustments should be made inside the transmitter.

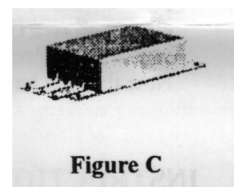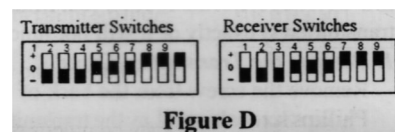

In the receiver, there are nine (9) dipswitches. Set the first eight switches in the

 receiver so that they exactly match the eight switch settings on the transmitter (Figure D). You will set the ninth dipswitch to correspond with the transmitter button that you wish to use to open the garage door. Each transmitter button corresponds to a (+,0,-) setting (Figure E). On the Dual

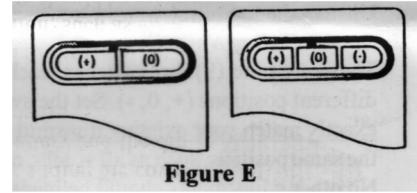

Transmitter, the Left button has a (+) setting, and the Right button has a setting of (0). On the Triple Transmitter, the Left button has a (+) setting, the Middle button has a (0) setting, and the Right button has a setting of (-). Set the ninth switch in the receiver to the same setting (+,0,-) as the button you wish to use. For example, if you wish to use the Right button on the Dual Transmitter to open your garage, you should set the ninth dipswitch on the receiver to (0).

Be sure not to use the same transmitter button that you selected to activate the gate operator. For example, on a Dual Transmitter, if you set the Left Button to open your gate, you would use the Right Button to open your garage door.